

QUICK START GUIDE

Infinity S-Flex System

The Infinity S-Flex system is a combination of rectifier shelves, distribution shelves, and a single controller.

Shelves may be factory or field joined.

Rectifier shelves, distribution shelves, and controllers each ship with their Quick Start Guides providing installation details.

This guide identifies typical Flex System installation steps, referencing the equipment Quick Start Guide appropriate to each step.

Installation Step	Equipment Quick Start Guide with Detail
1 Mount System	All Shelves
2 Ground Chassis	Distribution Shelf
3 Connect DC Reference (CO) Ground	Distribution Shelf
4 Connect AC Input	Rectifier Shelf
5 Connect DC Loads	Distribution Shelf
6 Set Controller Jumpers - LAN Port and Relay	Controller
7 Install Controller	Controller
8 Set Shelf ID	Controller and Rectifier Shelf
9 Install Signal and Communications Cables	Controller and Rectifier Shelf
10 Install 1-Wire Battery Temp and Voltage Monitor	Controller and Rectifier Shelf
11 Connect Battery	Distribution Shelf
12 Label Connections	Distribution Shelf
13 Install Breakers and Fuses	Distribution Shelf
14 Initial Start-up	Rectifier Shelf
15 Configure Controller	Controller

OmniOn Power Inc.

601 Shiloh Rd.
Plano, TX USA

omnionpower.com

We reserve the right to make technical changes or modify the contents of this document without prior notice. OmniOn Power does not accept any responsibility for errors or lack of information in this document and makes no warranty with respect to and assumes no liability as a result of any use of information in this document.

We reserve all rights in this document and in the subject matter and illustrations contained therein. Any reproduction, disclosure to third parties or utilization of its contents – in whole or in parts – is forbidden without prior written consent of OmniOn Power. This document does not convey license to any patent or any intellectual property right. Copyright© 2023 OmniOn Power Inc. All rights reserved.